



















DC ADAPTER LIST	
FOR MOBILE PHONE	
<p>Motorola V998 Type</p> 	<p>V998/CD928/L2000/v3688/Cd928/L2000/v3688/v2088/A6188/P7689/v8088/LF2000/m388/v3620/c289/T189/v8088/308/328/2088/2288/A6188/P7689/v8088/LF2000 and other compatible models.</p>
<p>Motorola T191 Type</p> 	<p>T191/T190/C350/C33X/C220/2288/2297/2290/2298/2260/T300/V2270/T180/T193/V2200/C120/E380/V150/V2297 and other compatible models.</p>
<p>V66 Type</p> 	<p>388c/A1000/A630/A760/A830/A835/A840/A845/A860/A920/A925/C331/C332/C333/C341/C343/C343c/C353/C975/C980/E1000/E310/E380/E398/E550/E816/I30sx/I35s/I50sx/I55sr/I55sx/I58sr/I80s/I85s/I88s/I90c/I90cse/I95cl/Im1000/Mpx220/T3/00p/T720/T720i/T721/T722/T725/T725G/T730/T731/Timeport 270c/Timeport 280/V1050/V120/V120c/V120e/Hollywood e815/RokrE1/V120t/V120x/V200/V260/V262/V265/V266/V276/V300/V330/V400/V400p/V500/V505/V510/V525/V535/V540/V545/V547/V550/V551/V555/V556/V557/V60/V600/V600i/V60c/V60g/V60i/V60p/V60s/V60t/V60x/V620/V635/V65p/V65s/V66/V70/V710/V80/V810/V975/V980</p>
<p>Nextel I730 Type</p> 	<p>i530/i560/i710/i730/i830/i670/i615/i760/i850/i860/i580/i870/i880/ i920/i930 and other compatible models</p>
<p>Motorola V3(i) Type</p> 	<p>A1200/A668/A70A/732/A780/A910/C305/C362/C363/E1070/E610/E615/E680/E680i/E685/E77v/I425/Ic402/Ic502/L2/M300/P EBL/V190/V191/V195/V197/V235/V320/V323/V323i/V325/V325i/V360/V361/V365/V660/W180/W315/W375/W385/W490/W510/Z8/KRZR/K1/KRZR/K1m/KRZR/K3/KRZR/maxxK3/Ming/LG8180/BLACKBERRY6210/6230/6510/6280/7280/7230/7250 and other compatible models.</p>
	<p>U9/Z6c World Edition/MOTO Q 9H/MOTO Q Global/RAZR2 V8 Dark Pearl Gray/RAZR2 V9 Mahogany/RAZR2 V9M Espresso and other compatible models.</p>

RAYvolution Connector Tips

<p>Nokia 8210 Type</p> 	<p>/1100/1101/1108/1110/1110i/1112/1221/1260/1261/1600/2100/2112/2115i/2116/2116i/2118/2125/2125i/2126i/2128i/2255/2260/3285/3310/3315/3330/3350/3360/3361/3390/3395/3410/3510/3510i/3520/3530/3560/3570/3585/3585i/3586/3586i/3587i/3588i/3589i/3590/3595/3600/3610/3620/3650/3660/5100/5120/5125/5140/5140i/5160/5165/5165i/5170i/5180i/5185i/5190/5300/5510/6010/6015/6015i/6016i/6019i/6020/6021/6030/6060/6061/6062/6100/6101/6108/6120/6160/6161/6162/6170/6185i/6190/6200/6210/6220/6225/6230/6230i/6235/6235i/6236i/6250/6255/6255i/6256i/6260/6310/6310i/6340/6340i/6360/6370/6385/640/650/6510/6560/6585/6590/6590i/6600/6610/6610i/6620/6630/6650/6651/6670/6680/6681/6682/7100/7160/7190/7200/7210/7250/7250i/7260/7270/7280/7380/7610/7650/7700/7710/8210/8250/8260/8265/8265i/8270/8280/8290/8310/8390/8800/8801/8810/8850/8850 gold/8855/8860/8890/8910/8910i/9200/9210i/9290/9300/9300i/9500/E60/E70/N-Gage/N-geQD/Shorty/THR850/THR880 and other compatible models.</p>
<p>Nokia 6101 Type</p> 	<p>1200/1208/1650/2135/2310/2630/2760/2865i/3109/3110/3152/3155/3155i/3250/3500/5070/5200/5300 Xpress Music/5310 press Music/5500 Sport/5610 Xpress Music/6233 Music Edition/770 Internet Tablet/8800 Sirocco condition/6070/6080/6085/6086/6101/6102/6102i/6103/6111/6120/6121/6125/6126/6131/6131NFC/6133/6136/6151/6152/6155/6155i/6165i/6233/6263/6265/6265i/6267/6268/6270/6275i/6280/6282/6288/6290/6200/6500/Slide/6555/7360/7370/7372/7390/7500/Prism/E50/E61/E62/E65/E90/N70/N71/N72/N73/N75/N76/N77/N80/N800/N80i/N810/N90/N91/N92/N93/N93i/N95/VI-3155i and other compatible models.</p>
<p>Nokia 8600 Luna Type</p> 	<p>7900 Prism/8600 Luna/8800 Sapphire Arte</p>
<p>Samsung A288 Type</p> 	<p>Ace/C130/E330N/E350/E370/IP-A790/MM-5600/SCH-A210/SCH-A310/SCH-A399/SCA-A475/SCH-A505/SCH-A509/SCH-A530/SCH-A539/SCH-A561/SCH-A563/SCH-A564/SCH-A570/SCH-A591/SCH-A592/SCH-A595/SCH-A599/SCH-A610/SCH-A650/SCH-A670/SCH-A720/SCH-A790/SCH-A795/SCH-A809/SCH-A890/SCH-N181/SCH-N182/SCH-N191/SCH-N195/SCH-N370/SCH-N375/SCH-X199/SCH-X209/SCH-X219/SCH-X309/SCH-X319/SCH-X359/SGH-A200/SGH-A288/SGH-A300/SGH-A308/SGH-A400/SGH-A408/SGH-A500/SGH-A608/SGH-A800/SGH-C100/SGH-C120/SGH-C200/SGH-C207/SGH-C210/SGH-C225/SGH-C300/SGH-C416/SGH-C417/SGH-D100/SGH-D307/SGH-D347/SGH-D357/SGH-D406/SGH-D407/SGH-D410/SGH-D415/SGH-D500/SGH-D500C/SGH-D500E/SGH-D508/SGH-D600/SGH-D600E/SGH-E100/SGH-E105/SGH-E300/SGH-E310/SGH-E315/SGH-E316/SGH-E317/SGH-E330/SGH-E330N/SGH-E335/SGH-E340/SGH-E340E/SGH-E350/SGH-E360/SGH-E370/SGH-E380/SGH-E400/SGH-E600/SGH-E630/SGH-E635/SGH-E700/SGH-E710/SGH-E715/SGH-E730/SGH-E760/SGH-E770/SGH-E800/SGH-K258/SGH-N200/SGH-N288/SGH-N400/SGH-N500/SGH-N620/SGH-N625/SGH-N626/SGH-N628/SGH-N635/SGH-P107/SGH-P200/SGH-P207/SGH-P408/SGH-P735/SGH-Q200/SGH-Q208/SGH-Q300/SGH-R200/SGH-R208/SGH-R210/SGH-R220/SGH-R225/SGH-R225m/SGH-S300M/SGH-S307/SGH-S400I/SGH-S401I/SGH-T100/SGH-T108/SGH-T200/SGH-T208/SGH-T209/SGH-T309/SGH-T319/SGH-T400/SGH-T410/SGH-T500/SGH-T609/SGH-T619/SGH-T709/SGH-T719/SGH-V200/SGH-V205/SGH-V206/SGH-X100/SGH-X105/SGH-X150/SGH-X160/SGH-X200/SGH-X300/SGH-X425/SGH-X426/SGH-</p>
<p>Samsung A460 Type</p> 	<p>MM-A700/SPH-A460/SPH-A500/SPH-A560/SPH-A600/SPH-A620/SPH-A660/SPH-A740/SPH-A760/SPH-A800/SPH-A820/SPH-A840/SPH-A880/SPH-A920/SPH-A940/SPH-IVI600/SPH-N240/SPH-N270/SPH-N400/VGA-1000/VM-A680/LG1200/LG6070/LGRD5230/LG2230/SANYO8100/7300/4920/AUD4050/MAX/8900/8610/8940/8910/KYOCER2035//2135/7135/1135/2119/2119B/2235/2255/2235/2345/3225/K3245/7135/Bluetooth earphone and other compatible models.</p>

RAYvolution Connector Tips

<p>Samsung E720 Type</p> 	<p>E720/E810/P730/P735/S3411/P710/Z500/E620</p>
<p>Samsung M300 Type</p> 	<p>A516/A737/M210/SCH-R200/SCH-R410/SCH-R610/SGH-A117/SGH-A127/SGH-A226/SGH-A517/SGH-E210/SGH-F200 /SGH-F210/SGH-G600/SGH-G800/SGH-L760/SGH-T409/SGH-T429/SGH-T439/SGH-T639/SPH-M300/SPH-M305/SPH-M510/SPH-M520/Beat SGH-T539/BlacJack II SGH-I617/Blas SGH_T729/Flipshot SCH-U900/Gleam SCH-U700/Helio Fin SPH-A513/Hue SCH-R500/Juke SCH-U470/Qbow1 SGH-F700MBVVD2/SLM SGH-A747</p>
<p>Samsung D800 Type</p> 	<p>D820/D840/E570/E870/E900/P300/SCH-U420/SCH-U740/SGH-A436/SGH-A437/SGH-A706/SGH-C140/SGH-C170/SGHC520SGH-D520/SGH-D800/SGH-D830/SGH-D806/SGH-D807/SGH-D820/SGH-D840/SGH-D900/SGH-E200/SGH-E250/SGH-E390/SGH-E500/SGH-E570/SGH-E590/SGH-E740/SGH-E780/SGH-E790/SGH-E840/SGH-E900/SGH-F300/SGH-F500/SGH-I600/SGH-I620/SGH-I710/SGH-J600/SGH-M300/SGH-P300/SGH-P310/SGH-P910/SGH-P920/SGH-P930/SGH-P940/SGH-S501I/SGH-T219/SGH-T509/SGH-T519/SGH-T629/SGH-T809/SGH-X830/SGH-Z150/SGH-Z230/SGH-Z24/SGH-Z360/SGH-Z400/SGH-Z510/SGH-Z540/SGH-Z560/SGH-Z620/SGH-Z650i/SGH-Z710/SGH-ZV40/SPH-M610/U510/Z370/Z400/Z510/Z510i/Black Carbon SGH-D900/Black Jack SGH-i607/Helio Drift PH-A303/Lime SGH-E250/Strip GH-T329/Tbird J600/SGH-U700/The wafer SCH-R510/Trace/SGH-Z630/SGH-D900i/Z720/SGH-U100/X820/D830/F300/Upstage SPH-M620 and other compatible models.</p>
<p>Siemens C25 Type</p> 	<p>C25/S25/C35/C45/S45/S46/SL45/M50/A50/3518/3568/6688/A35/A36/A40/ME45/MT50/SL42/S45i and other compatible models.</p>
<p>Siemens C55 Type</p> 	<p>A57/A60/A62/A65/C55/C60/C62/C65/C75/CF62/CF75/CFX65/CL75/CV65/CX65/CX70/CX70Emoty/CX75/M55/M65/M75/S55/S65/SK65/SL55/SL65/SP65/SX1 and other compatible models.</p>
<p>Siemens A31 aeries</p> 	<p>A31/A58/AF51/C81/E71/E81/EF71/EF81/EL71/M81/S68/SL91 and other compatible models.</p>
<p>Sony Ericsson T28 Type</p> 	<p>A2218z/F500i/J200i/J210c/J210i/J300a/J300c/J300i/K300a/K300c/K300i/K500c/K506c/K508c/K508i/K600i/K608i/K700c/K700i/P800/P802/P900/P908/P910a/P910c/P910i/R300/R380World/S700c/S700i/S710a/T100/T105/T106/T200/T226/T226m/T226s /T230/T237/T237s/T238/T28World/T28z/T290a/T290c/T290i/T292a/T300/T306/T310/T312/T316/T39/T39m/T60/T600/T606/T608/T60i/T61/T610/T610Z/T616/T61c/T61d/T61ds/T61LX/T61z/T628/T62U/T630/T637/T68/T68i/T68ie/T68m/V600i/V800/Z1010/Z200/Z208/Z300a/Z300c/Z300i/Z500a/Z502a/Z600/Z608/Z800i/Akono K500i and other compatible models.</p>






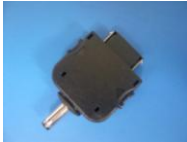

RAYvolution Connector Tips







Sony Ericsson K750 Type










D750i/J100a/J100c/J100i/J110i/J120i/J220a/J220c/J220i/J221/J230a/J230c/J230i/K200i/K220i/K310i/K320i/K510i/K530i/K550i/K550im/K610i/K610im/K630i/K660i/K750c/K750i/K758c/K770i/K790a/K790c/K800i/K810i/M600i/M608c/P1i/P990c/P990i/S500/T250a/T250i/T650i/T630i/T640i/W2001/W200a/W200i/W300c/W330i/W380a/W550i/W580i/W600i/W610i/W660i/W700c/W700i/W710/W710c/W710i/W810/W810c/W810i/W850/W880i/W910i/W950c/W960c/W960i/Z250i/Z310a/Z310i/Z320i/Z520a/Z520c/Z520i/Z550/Z550a/Z550c/Z550i/Z558i/Z610i/Z710c/Z710i/Z750/Z750a/Z750i/Walkman W380i/Walkman W550c/Walkman W600c/Walkman W600i/Walkman W800c/Walkman W800i/Walkman 890i/Walkman W900c/Walkman W900i/Walkman/Walkman W960i and other compatible models.

RAYvolution Connector Tips

<p>LG 8080 Type</p> 	<p>8080/VX3200/VX4650/VX5200/VX6100/VX7000/VX8000/VX8100/VX9800/LG3020/vc4700 and other compatible models.</p>
<p>LG KG800 Type</p> 	<p>AX275/CE110/CG180/CU515/CU575/CU915/CU920/EnV9900/KG320/KG320/KG810/LX150/LX160/LX165/RUMOR/UX380/VX5400/VX8350/VX8550/VX8600/VX8700/VX9400/VX9900/Cherry Chocolate/Chocolate KG800/Chocolate VX8500/Chocolate Flip 8600/Chocolate Green/Chocolate/ENV/Mint Chocolate/Muziq LX570/Prada KE850/Shine CU720/Shine KE970/Shine U970/The Wave AX380/Trax/VENUS VX8800/Voyager VX10k/White Chocolate and other compatible models.</p>
<p>LG 6000 Type</p> 	<p>C1300/C3300/F9100/G4011/G4015/G4020/G4050/L1100/L1150/L1200/LG5400/LX5450/LX5550/V15225/VX4500/VX6000/G4010L/1400and other compatible models.</p>
<p>LG 510 Type</p> 	<p>110/111/4NE1/510/520/525/1010/5200/5250/LX1200/TP1100/VX1/VX10/VX1000/VX3100/VX4400/VX2000 and other compatible models.</p>
<p>Japan DOCOMO Type</p> 	<p>FOR JAPAN GSM MOBILE PHONES</p>
<p>Japan FOMA Type</p> 	<p>FOR JAPAN 3G MOBILE PHONES</p>
<p>Japan AU Type</p> 	<p>FOR JAPAN CDMA MOBILE PHONES</p>

For Game Players	
<p>Nintendo Series</p> 	<p>For Nintendo GBA/GBM/NDS Game Players</p>
<p>Nintendo NDS Type</p> 	<p>For Nintendo NDS Game Players</p>
<p>Sony PSP Type</p> 	<p>For Sony PSP Type Game Players</p>
FOR APPLE	
<p>IPOD Nano Type</p> 	<p>iPod/iPod Classic/Pod Mini/Pod Nano/Pod Photo/Pod Touch/Pod U2 Sei/Pod Video and iPhone</p>
<p>Ipod Shuffle I Type (USB AF)</p> 	<p>IPOD Shuffle I mp3 player</p>
<p>Ipod Shuffle II Type</p> 	<p>For IPOD Shuffle II mp3 player</p>

FOR PDA	
Palm one Type 	TX/Centro/LifeDrive/Treo 650/Treo 680/Treo 700p/Treo 700w/Treo 700wx/Treo 750/Treo 750v/Treo 755/Tungsten E2/Tungsten T5
HP PDA Type 	H1700/H1910/H1915/H1920/H1930/H1935/H1937/H1940/H1945/H2210/H2215/H3830/H3835/H3850/H3860/H3870/H3875/H3950/H3955/H3970/H3975/H4150/H4155/H4350/H5450/H5455/H5550/H5555/H6315/H6365/Hw6515/Hx2110/Hx2410/Hx2415/Hx2750/Hx2755/Hx4700/Hx4705/Rx1950/Rx1955/Rx3115/Rx3400/Rx3715/Rz1710/Rz1715/Hw6510/Hw6940/Hx2190/Hx2790/Hx2795/H6320/H6325/H6340/Hw6910/Hw6915/hw6920/Hw6925/Hw6945/Hw6950/Hw6955/Hx2115/Hx2490/Hx2495
DELL PDA Type 	X3/X5
FUJITSU SIEMENS PDA Type 	F700is/F880ies/F901ic/F901ies/F901it/F901is
For Notebook	
4817-5521 	ASUS/HP/COMPAQ
5517-5521 	ACER/TI/IBM
5521-5521 	ACER/TI/HP/COMPAQ/TOSHIBA

RAYvolution Connector Tips

<p>5525-5521</p> 	<p>ACER/TI/HP/COMPAQ/TOSHIBA/DELL/IBM/NEC</p>
<p>6330-5521</p> 	<p>NEC/TOSHIBA</p>
<p>6545-5521</p> 	<p>DELL/SONY/FUJITSU</p>
<p>7452-5521</p> 	<p>DELL D SERIES</p>
<p>7855-5521</p> 	<p>NEW IBM AND LENOVO</p>
<p>DELL 3 PIN</p> 	<p>DELL</p>
<p>APPLE 2.5</p> 	<p>APPLE</p>
<p>APPLE 3.5</p> 	<p>APPLE</p>
<p>5533-5521</p> 	<p>SAMSUNG</p>

RAYvolution Connector Tips

4815-5521



NEW HP DV SERIES